


Assembly and maintenance manual

Type SMZ

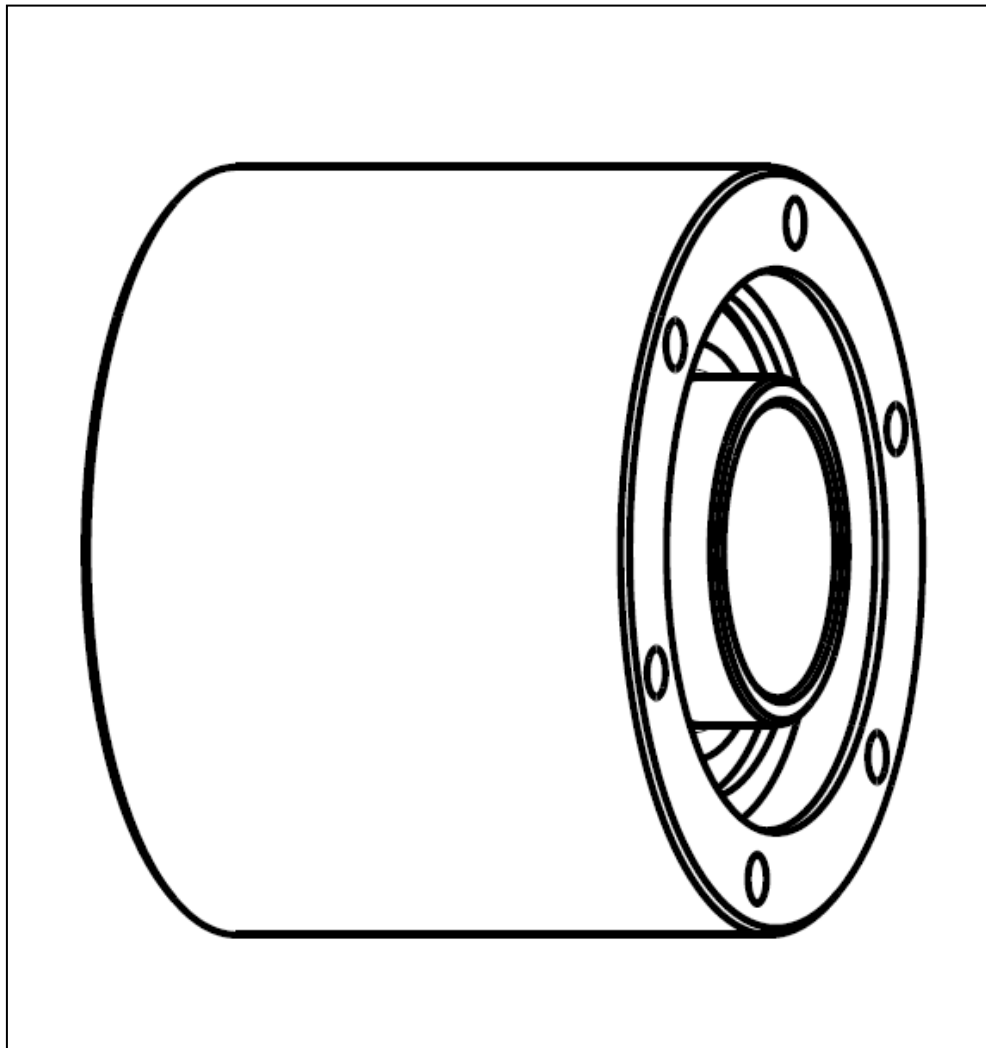

Hatschekstr.36
69126 Heidelberg
Deutschland
Tel +49(0)6221 30470
Fax +49(0)6221 304731
info@stieber.de
www.stieber.de

Date of issue: 14.07.2022 GB

Revision: 0

U:\EngUsers\ProduktDoku\1AAA_Einbauerklaerung_Wartungsanleitung_Konformitaetserklaerung\1AAA_Wartungsanleitungen\Orginal_Worddatei\M1548E_0_SMZ.docx



General safety instructions






	WARNING	<p>Risk of injury due to moving components! Rotating driven components can cause the most severe injuries. Therefore, during operation:</p> <ul style="list-style-type: none"> ➤ It is strictly forbidden for persons to loiter in the danger zone or in its immediate vicinity ➤ Do not disable, render unusable or circumvent safety equipment and / or safety functions <p>Prior to entering the danger zone:</p> <ul style="list-style-type: none"> ➤ Switch off the power supply and secure it against being switched on again ➤ Wait for lagging components to come to a standstill
	DANGER!	<p>Danger due to improper operation!</p> <ul style="list-style-type: none"> ➤ Modifications to the clutch coupling are not permitted and may impair safety ➤ All tasks may only be performed by personnel with the requisite training and expertise ➤ Repairs and maintenance tasks may only be performed when the machine is at a standstill. To this end, the machine is to be secured against a restart
	WARNING	<p>Risk of injury due to the clutch coupling falling down or tipping over! The weight of the clutch coupling can injure people and cause severe crushing. Therefore:</p> <ul style="list-style-type: none"> ➤ Use a suitable lifting gear for lifting (slings, etc.) which is able to support the weight of the clutch coupling
	WARNING	<p>Risk of injury due to incorrect assembly! Faulty installation and maintenance can cause severe property damage and personal injury. Installation, maintenance and repair work may only be performed by personnel with the requisite training and expertise.</p>
	WARNING	<p>Risk of injury for insufficiently qualified personnel! Improper handling can cause significant personal injury and property damage. Therefore:</p> <ul style="list-style-type: none"> ➤ Only ever have tasks performed by those persons to whom the tasks have been assigned

Table of contents	Page
General safety instructions	2
1 General.....	4
1.1 Information relating to the assembly and maintenance manual	4
1.2 Explanation of symbols	4
1.3 Manufacturer	5
1.4 Labeling	5
1.5 Environmental protection.....	5
2 Safety	5
2.1 Intended use	5
2.2 Responsibility of the operator	6
2.3 Assembly and maintenance personnel	7
2.4 Personal protective equipment	7
2.5 Limitations of use	7
3 Structure and function	8
3.1 Structure	8
3.2 Function	10
4 Transport and packaging.....	11
5 Storage.....	11
5.1 Short-term storage	11
5.2 Long-term storage.....	11
6 Installation	12
6.1 Checking the direction of rotation	12
6.2 Changing the direction of rotation.....	13
6.3 Lubrication	13
6.4 Assembly	13
7 Operation	14
8 Maintenance	15
9 Disassembly	16
10 Disposal	17
11 Faults	17

1 General

1.1 Information relating to the assembly and maintenance manual

This assembly and maintenance manual provides important information regarding the installation and commissioning of the clutch coupling of type SMZ.






Prerequisite for safe operation is compliance with all of the stated safety and handling instructions.

Moreover, the relevant local accident protection guidelines and general safety provisions for the field of application of the clutch coupling are to be complied with.

Read the assembly and maintenance manual carefully prior to installation and commissioning. It is a product component and must be kept in the immediate vicinity of the installation site and be accessible to personnel at all times. Furthermore, all safety instructions stated in the assembly and maintenance manual are to be observed.

1.2 Explanation of symbols

Warnings are marked throughout this assembly and maintenance manual by symbols. These warning symbols are introduced by signal words which indicate the extent of the danger. Comply with these warning symbols under all circumstances and act with due care and attention to avoid accidents, personal injury and property damage.

	Danger!	...indicates an imminently dangerous situation which can be fatal or cause severe injuries if it is not averted.
	WARNING	...indicates a potentially dangerous situation which can be fatal or cause severe injuries if it is not averted.
	ATTENTION	...indicates a potentially dangerous situation which can cause minor or light injuries if it is not averted.
	CAUTION	...indicates a potentially dangerous situation which can cause property damage if it is not averted.
	NOTE	... highlights helpful tips and recommendations as well as information for efficient and fault-free operation.

1.3 Manufacturer

STIEBER GmbH, D-69126 Heidelberg, Hatschekstr. 36, Germany
Phone +49 (0) 6221 3047-0, Fax -31

1.4 Labeling

Front face of the outer race

- Manufacturer's name
- Type designation
- Date of manufacture (coded)

1.5 Environmental protection

Energy: The clutch coupling does not use any electrical energy

Materials: Steel

Recycling: Steel parts are up to 100% recyclable

2 Safety

2.1 Intended use

Clutch couplings of type SMZ are directional clutches, engaged and disengaged automatically. They can be used as overrunning clutches, backstops or indexing clutches in machinery and equipment.

Clutch couplings may only be operated within the limitations of use outlined in section 2.5.

All of the specifications stated in the assembly and maintenance manual must be strictly adhered to.

Any claims due to damage arising from improper use are excluded. The operator carries sole liability for all damage arising from improper use.

Driving operation of an overrunning clutch:

When operating in torque transmission mode the driving machine element and the driven member are connected in a force-locking manner. In this operating state, power will be transferred.

Overrunning operation of an overrunning clutch:

The overrunning clutch disengages automatically when the driven member achieves a higher rotation speed than the driving member.

Lockout mode of a backstop:

When operating in the locking direction of the clutch coupling, the machine shaft and the torque bracing to the machine element are connected in a force-locking manner.

In this operating state, torque will be transferred.

Overrunning mode of a backstop:

The clutch coupling disengages automatically the force-locked connection between the machine shaft and the torque bracing to the machine element, when the machine shaft runs in clutch coupling direction.

Driving operation of an indexing clutch:

When operating in torque transmission mode the driving machine element and the driven member are connected in a force-locking manner. In this operating state, power will be transferred.

Overrunning operation of an indexing clutch:

The clutch coupling disengages automatically when the machine shaft is idling.


2.2 Responsibility of the operator

The operator of the machine, in which the clutch coupling is installed, is subject to the legal obligations concerning occupational safety.

The valid provisions for the site of operation as well as the safety and accident prevention regulations of the trade associations are to be observed. This, in particular, means that the operator:

- is aware of the valid occupational safety provisions.
- implements the necessary behavioral requirements for operation of the machine, in which the clutch coupling is installed, at the site of operation.
- clearly defines responsibilities for installation, operation, maintenance and cleaning of the machine in which the clutch coupling clutch is installed.
- ensures that all staff members, who work at or with the machine in which the clutch coupling is installed, are employed and have read and understood the operating manual. Moreover, he must, at regular intervals, provide training for personnel on how to handle the machine, in which the clutch coupling is installed, and inform them of the potential dangers. In addition, the operator is responsible for ensuring that the machine in which the clutch coupling is installed:
 - is always in perfect technical condition.
 - is maintained in accordance with the specified maintenance intervals.
 - has all its safety equipment checked regularly for completeness and functionality.

2.3 Assembly and maintenance personnel

	WARNING	Risk of injury for insufficiently qualified personnel! Improper handling can cause significant personal injury and property damage. Therefore: ➤ Only ever have tasks performed by those persons to whom the tasks have been assigned.
---	----------------	---

Qualified personnel are those persons who, owing to their training, experience and instruction as well as their knowledge of relevant standards, provisions, accident prevention regulations and operating conditions, have been authorized by the person responsible for the safety of the plant to perform the requisite tasks and are able to recognize and avoid potential dangers in doing so. Knowledge of first-aid measures and on-site emergency equipment must also be included.

2.4 Personal protective equipment

It is necessary to wear personal protective equipment when handling the machine, in which the clutch coupling is installed, to minimize health risks.

The necessary protective equipment such as work shoes, gloves, safety goggles etc. is to be put on prior to all tasks and kept on during the task.

2.5 Limitations of use

- Maximum allowable overrunning speeds and maximum torque capacity:

Type	Size		Overrunning Speeds		Grease Quantity
SMZ	dH7	T _{max}	n _{imax}	n _{amax}	
	[mm]	[Nm]	rpm	rpm	[mm]
	20	600	1600	700	3
	30	2070	1500	500	8
	35	2200	1400	300	-
	45	3500	1300	300	-
	60	6800	1100	250	-
	70	8600	1000	250	-

Table 1 Specification

- Limits for ambient temperature: from -25°C to +50°C
- Maximum operating temperature: 90°C

- Required machine shaft tolerance: $d = h6$ or $j6$
- Recommended tolerance for centering to accommodate the outer race
H7 or G7
- Grease lubrication: KLÜBERSYNTH BM 44-42

3 Structure and function

3.1 Structure

Item 1	Outer race
Item 2	Inner race
Item 3	Cage
Item 4	Retaining ring
Item 5	Disc
Item 10	Ball bearing

Table 2 Parts list

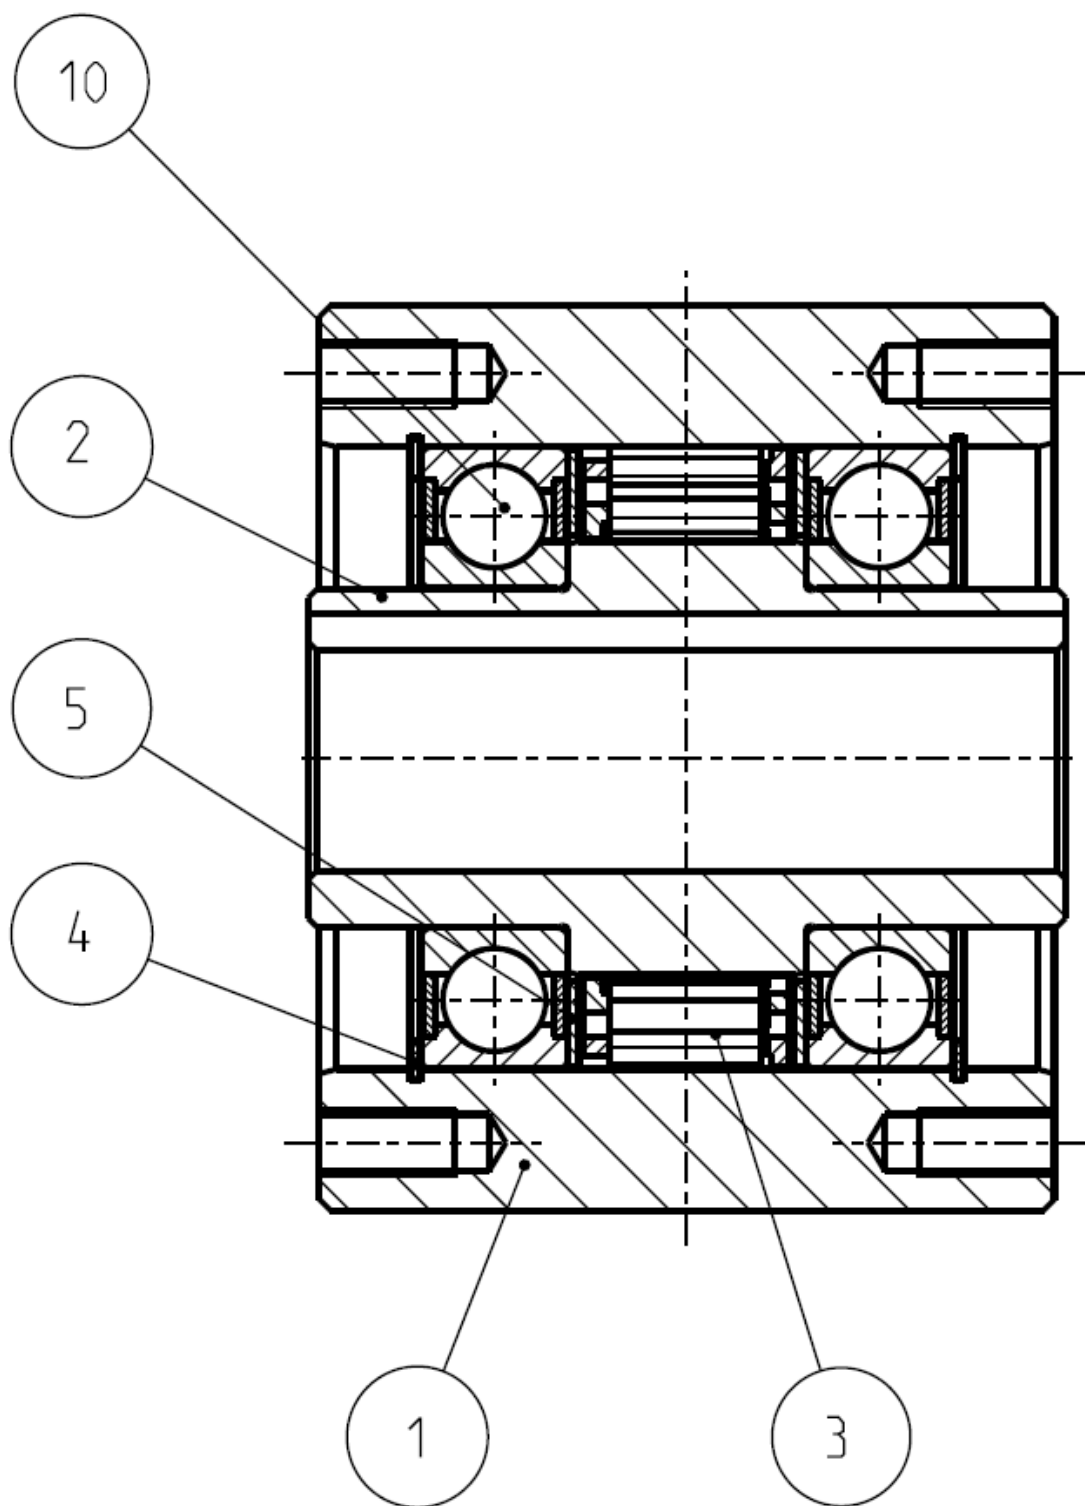


Fig.1 Structure SMZ

3.2 Function

Clutch couplings of type SMZ are fitted with DC cages.

The individually spring loaded sprags, fitted in a DC cage, run synchronously and are supported by the inner and the outer race. The sprags ensure engagement and disengagement according to the relative motion of the races.

When turning the inner or outer clutch race (see Fig. 2a) in the pulling direction, the sprags create a frictional connection between the inner and outer race so that a torque or output can be transmitted.

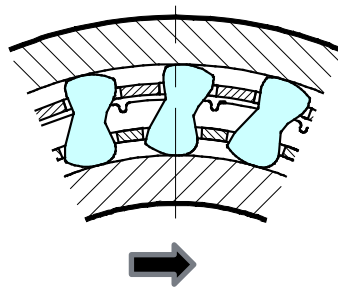


Fig.2a Pulling

Overrun operation is carried out if the inner race or outer race is turned in the overrun direction. This interrupts the frictional connection (see Fig. 2b) between the inner and outer race. In overrun operation the speeds of the inner race and outer race are different.

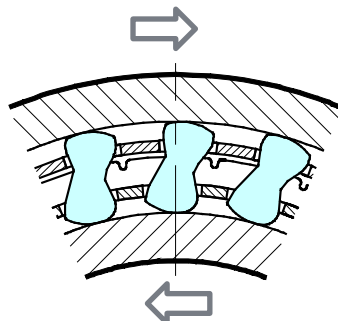


Fig.2b Overrun operation

4 Transport and packaging



NOTICE

The local provisions regarding the disposal of transport and packaging materials are to be observed.

One-way clutches of Type SMZ are packed in air cushion foils.

The one-way clutch is shipped in a box or on a pallet.

Transport damage to the packaging and/or the one-way clutch is to be reported to the respective transit company without delay.

The one-way clutches must be unpacked in a clean and dry environment.

5 Storage

5.1 Short-term storage

The type SMZ is packed in VCI bubble wrap. The VCI bubble wrap is to be checked at regular intervals. The frequency of these intervals is dependent on the environmental conditions (temperature, moisture, salt content of the air, etc.) at the storage site.

The maximum storage period (short-term storage) is 6 months. Moreover, the backstop must have long-term storage corrosion protection applied to it.

Store packages under the following conditions:

- Do not keep outdoors
- Keep dry and free from dust
- Do not expose to aggressive media
- Keep away from direct sunlight
- Avoid mechanical shocks and vibrations
- Storage temperature: -10 to +60°C
- Relative humidity: max. 95%, non-condensing

5.2 Long-term storage





For long-term storage, the one-way clutch must be shrink-wrapped with a desiccant and provided with a hygroscope. The corrosion protection must be checked after a period not exceeding one year or else depending on the environmental conditions (temperature, moisture, salt content of the air, etc.) at the storage site.

Store packages under the following conditions:

- Do not keep outdoors
- Keep dry and free from dust
- Do not expose to aggressive media
- Keep away from direct sunlight
- Avoid mechanical shocks and vibrations
- Storage temperature: -10 to +60°C
- Relative humidity: max. 95%, non-condensing

6 Installation

6.1 Checking the direction of rotation

	WARNING	Risk of injury due to incorrect assembly! Faulty installation and maintenance can cause severe property damage and personal injury! Installation, maintenance and repair work may only be performed by personnel with the requisite training and expertise!
	WARNING	Risk of injury due to moving components! Rotating driven components can cause the most severe injuries. Therefore, during operation: <ul style="list-style-type: none"> ➤ It is strictly forbidden for persons to loiter in the danger zone or in its immediate vicinity. ➤ Do not disable, render unusable or circumvent safety equipment and / or safety functions. Prior to entering the danger zone: <ul style="list-style-type: none"> ➤ Switch off the power supply and secure it against being switched on again. ➤ Wait for lagging components to come to a standstill.
	WARNING	Risk of injury due to the clutch coupling falling down or tipping over! The weight of the clutch coupling can injure people and cause severe crushing. Therefore: <ul style="list-style-type: none"> ➤ Use a suitable lifting gear for lifting (slings, etc.) which is able to support the weight of the clutch coupling.
	WARNING	Risk of injury for insufficiently qualified personnel! Improper handling can cause significant personal injury and property damage. Therefore: <ul style="list-style-type: none"> ➤ Only ever have tasks performed by those persons to whom the tasks have been assigned.

The direction of rotation must be checked prior to installation.

6.2 Changing the direction of rotation

Changing of the direction of rotation is achieved by turning around.

6.3 Lubrication


Clutch couplings SMZ are factory-filled with grease KLÜBERSYNTH BM 44-42 and are ready for operation.

6.4 Assembly

	WARNING	Risk of injury due to incorrect assembly! Faulty installation and maintenance can cause severe property damage and personal injury. Installation, maintenance and repair work may only be performed by personnel with the requisite training and expertise.
	WARNING	Risk of injury due to moving components! Rotating driven components can cause the most severe injuries. Therefore, during operation: <ul style="list-style-type: none"> ➤ It is strictly forbidden for persons to loiter in the danger zone or in its immediate vicinity. ➤ Do not disable, render unusable or circumvent safety equipment and / or safety functions. Prior to entering the danger zone: <ul style="list-style-type: none"> ➤ Switch off the power supply and secure it against being switched on again. ➤ Wait for lagging components to come to a standstill.
	WARNING	Risk of injury due to falling down components! Falling down components can cause serious injuries! Prevent the clutch coupling from falling down!
	WARNING	Risk of injury for insufficiently qualified personnel! Improper handling can cause significant personal injury and property damage. Therefore: <ul style="list-style-type: none"> ➤ Only ever have tasks performed by those persons to whom the tasks have been assigned.

Procedural steps:

- Push the one-way clutch onto the oiled machine shaft, attaching suitable lifting equipment if necessary.

	NOTE	Apply pressure to the inner race only when pressing the clutch coupling onto the shaft, since otherwise the ball bearings can be damaged!
---	-------------	---


- Tighten the machine element with the outer race. To do so, use fastening screws (e.g. as per standard DIN EN ISO 4762 and with screw quality 10.9).

Clutch size SMZ	Screw size	Anziehdrehmoment [Nm]
20	M6	14
30-70	M8	34

Table 3 Tightening torques


- Fasten the inner race axially.
- Check overrunning. The one-way clutch must be easy to turn in the overrun direction of rotation.


7 Operation


	WARNING	<p>Risk of injury due to moving components! Rotating, driven components can cause severe injuries. Therefore, during operation:</p> <ul style="list-style-type: none"> ➤ It is strictly forbidden for persons to loiter in the hazard area or in its immediate vicinity. ➤ Do not disable, render unusable, or circumvent safety equipment and/or safety functions. <p>Prior to entering the hazard area:</p> <ul style="list-style-type: none"> ➤ Switch off the power supply and secure it against being switched on again. ➤ Wait for still moving components to come to a standstill.
---	----------------	--


SMZ series should be checked for damage at regular intervals.


8 Maintenance

	WARNING	<p>Risk of injury due to moving components! Rotating, driven components can cause severe injuries. Therefore, during operation:</p> <ul style="list-style-type: none"> ➤ It is strictly forbidden for persons to loiter in the hazard area or in its immediate vicinity. ➤ Do not disable, render unusable, or circumvent safety equipment and/or safety functions. <p>Prior to entering the hazard area:</p> <ul style="list-style-type: none"> ➤ Switch off the power supply and secure it against being switched on again. ➤ Wait for still moving components to come to a standstill.
---	----------------	---

	WARNING	<p>Risk of injury due to incorrect assembly! Incorrect assembly and maintenance can cause severe property damage and personal injury. Assembly, maintenance, and repair work may only be performed by personnel with the requisite training and expertise.</p>
--	----------------	---

	WARNING	<p>Risk of injury due to falling components! Falling components can lead to serious injuries to persons. Secure the one-way clutch against falling down.</p>
---	----------------	---


	WARNING	<p>Risk of injury for insufficiently qualified personnel! Improper handling can cause significant personal injury and property damage. Therefore:</p> <ul style="list-style-type: none"> ➤ Only ever have tasks performed by those persons to whom the tasks have been assigned.
---	----------------	---

	WARNING	<p>Danger of scalding due to hot surfaces! There is a risk of burns and danger of scalding during operation due to hot surfaces. Therefore:</p> <ul style="list-style-type: none"> ➤ Do not touch one-way clutches during operation.
---	----------------	---


To increase the service life, it is recommended to disassemble the freewheel at least every two years, depending on the type of application, so that the freewheel can be cleaned, checked and regreased.

Procedural steps:

- Remove the axial fastening of the inner race.
- Loosen the fastening screws from the outer race and from driven machine elements.
- Pull the one-way clutch from the machine shaft using suitable lifting equipment, if required.
- Uninstall the outer race, cage and the grooved ball bearings from the inner race.


	NOTICE	New grooved ball bearings must be installed after all maintenance operations.
---	---------------	---


- Preclean the outer race, inner race and cage with a petroleum-based industrial cleaning agent and degrease with an acetone-based cleaning agent.
- The free space between the two bearings should be filled 1/3 to 1/2 with grease (see Tab. 1 Specifications).


	NOTICE	Greases of consistency class DIN 51818 NLGI 2 are also possible!!
--	---------------	---


- Mount the outer race, cage and the deep groove ball bearing on the inner race.

9 Disassembly

	WARNING	Risk of injury due to incorrect assembly! Incorrect assembly and maintenance can cause severe property damage and personal injury. Assembly, maintenance, and repair work may only be performed by personnel with the requisite training and expertise.
---	----------------	--

	WARNING	Risk of injury due to moving components! Rotating, driven components can cause severe injuries. Therefore, during operation: <ul style="list-style-type: none"> ➤ It is strictly forbidden for persons to loiter in the hazard area or in its immediate vicinity. ➤ Do not disable, render unusable, or circumvent safety equipment and/or safety functions. Prior to entering the hazard area: <ul style="list-style-type: none"> ➤ Switch off the power supply and secure it against being switched on again. ➤ Wait for still moving components to come to a standstill.
---	----------------	---


	WARNING	Danger of scalding due to hot surfaces! There is a risk of burns and danger of scalding during operation due to hot surfaces. Therefore: ➤ Do not touch one-way clutches during operation!
---	----------------	---

	WARNING	Risk of injury due to falling components! Falling components can lead to serious injuries to persons. Secure the one-way clutch against falling down.
---	----------------	--

Procedural steps:

- Remove the axial fastening of the inner race.
- Loosen the fastening screws from the outer race and from driven machine elements.
- Pull the one-way clutch from the machine shaft using suitable lifting equipment, if required.

10 Disposal

	NOTICE	The local provisions regarding the disposal of metallic components and any lubricants present are to be observed.
---	---------------	---

The one-way clutch is comprised of metallic materials that are coated with grease or oil. Metallic materials are fully recyclable. Lubricants and anticorrosive agents are to be disposed of separately. The local disposal provisions are to be observed in this regard.

11 Faults

The manufacturer is to be contacted immediately should any faults arise.

STIEBER GMBH, D-69126 Heidelberg, Hatschekstr. 36, Germany
 Phone +49 (0) 6221 3047-0, Fax -31